

Guia de instalação

Antes de usar o projetor, leia as instruções de segurança no seu *Manual do usuário*, incluído no CD do projetor.


Conecte o projetor

Escolha uma das seguintes formas de conexão:

Porta USB do computador

Conecte um computador usando o cabo USB que veio com o projetor.

Conecte a extremidade quadrada do cabo USB à porta USB  **TypeB** (quadrada). Conecte a extremidade plana do cabo a qualquer porta USB do computador. Você também pode conectar um cabo de áudio.

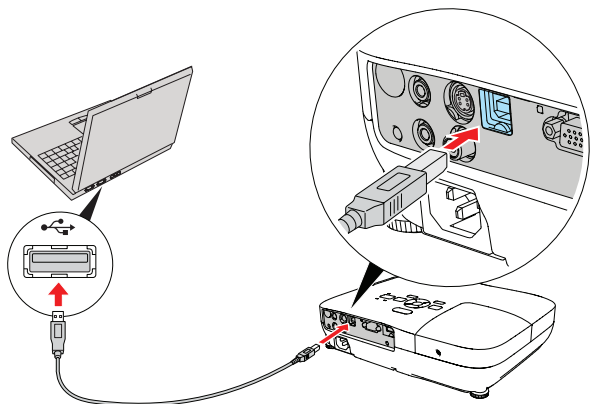

Windows®: Após ligar o projetor, siga as instruções na tela para instalar o software Epson USB Display (EMP_UDSE.EXE; necessário apenas quando conecta pela primeira vez).


OBSERVAÇÃO: Se a tela do software não aparecer automaticamente, abra **Meu Computador** ou **Computador** e clique duas vezes em **EPSON_PJ_UD**.

Macintosh®: Após ligar o projetor, o arquivo de configuração é exibido no Finder. Clique duas vezes em **USB Display Installer** e siga as instruções na tela para instalar o software Epson USB Display (necessário apenas quando conecta pela primeira vez).

Porta Computer Monitor

Conecte um computador usando o cabo VGA incluído.

Conecte uma extremidade à porta **Computer (Component Video)** do projetor, e a outra à porta  de monitor do computador. Se estiver usando um notebook, mude para exibição externa. Você também pode conectar um cabo de áudio.

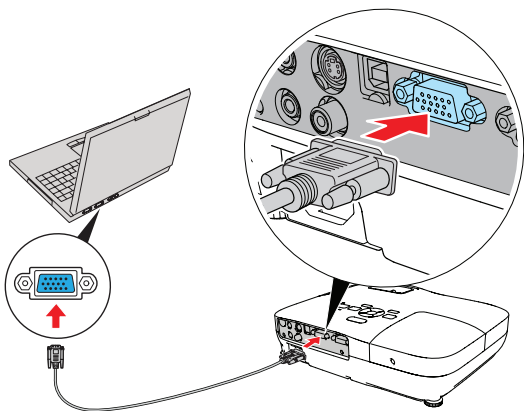


PowerLite S10+: Também é possível conectar um monitor à porta **Monitor Out**. Consulte o *Manual do usuário* no CD do projetor.

Câmera ou dispositivo USB (PowerLite X10+/W10+)

É possível usar a função de apresentação de slides para projetar imagens em formato JPEG. Consulte o *Manual do usuário*, incluído no CD do projetor para mais informação.


Dispositivo de vídeo (PowerLite S10+)

Conecte até 3 dispositivos de vídeo e use o controle remoto para alternar entre eles.

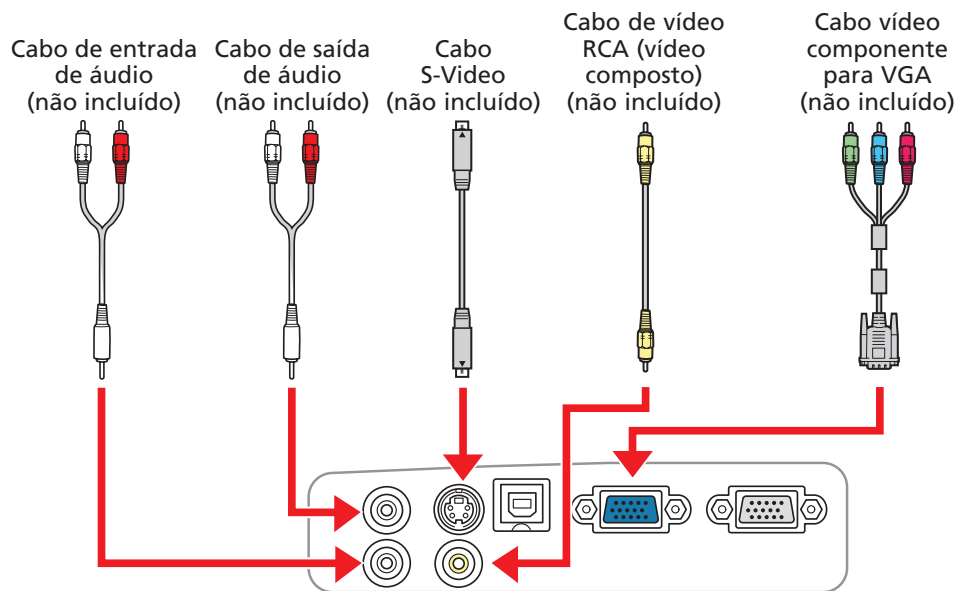


Dispositivo de vídeo (PowerLite X10+/W10+)

Conecte até 4 dispositivos de vídeo e use o controle remoto para alternar entre eles.

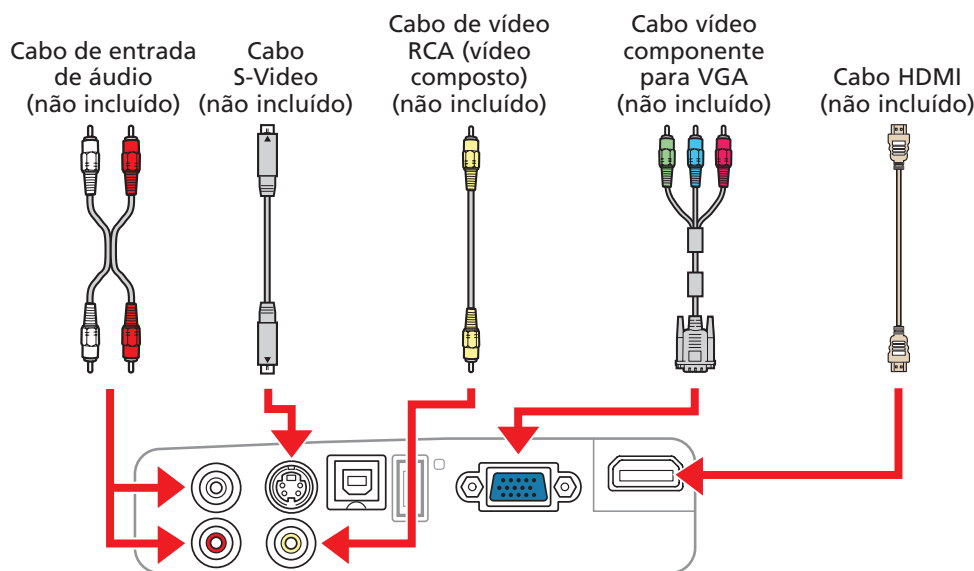


Ligue o projetor

- 1 Ligue o computador ou fonte de vídeo.
- 2 Conecte o projetor.

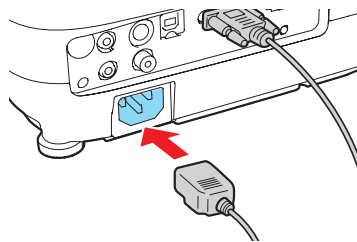


- 3 Abra a tampa deslizante **A/V Mute** completamente.

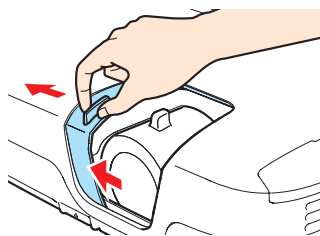

- 4 Pressione o botão  de energia no projetor ou controle remoto.

A luz de energia pisca em verde, depois fica acesa.

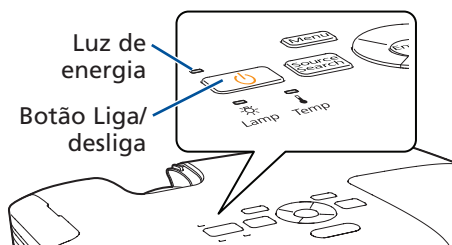


OBSERVAÇÃO: Para desligar o projetor, pressione o botão  de energia duas vezes, depois remova o plugue. Não é preciso esperar que o projetor esfrie.

- 5 O idioma padrão no sistema de menus é Inglês. Para mudar o idioma, pressione o botão **Menu** no projetor ou no controle remoto. Selecione **Extended** e pressione **Enter** e depois selecione **Language** e pressione **Enter**. Escolha o idioma desejado e pressione **Enter**. Pressione **Esc** ou **Menu** para sair.




Ajuste a imagem


- 1 Se não vir uma imagem, pressione o botão **Source Search** no projetor ou controle remoto para selecionar a fonte de imagem.
OBSERVAÇÃO: Se ainda vir uma tela em branco ou tiver outros problemas de visualização, consulte as dicas de resolução de problemas no lado direito.
- 2 Para levantar a imagem, pressione a alavanca de liberação do pé e levante a frente do projetor. Solte o botão para travar o pé na posição desejada.

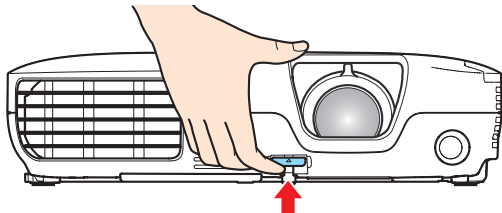


- 3 Gire o anel de foco para tornar a imagem mais nítida.

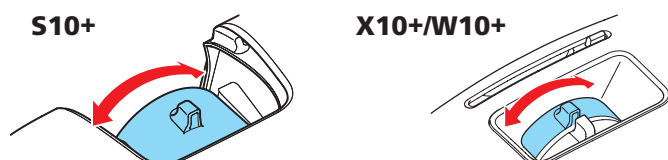

- 4 **PowerLite S10+:** Para reduzir ou aumentar a imagem, pressione os botões **Tele** (reduzir) ou **Wide** (aumentar) no projetor. Também é possível usar a opção **Zoom** no menu Definição do projetor. Consulte o *Manual do usuário*, incluído no CD do projetor.

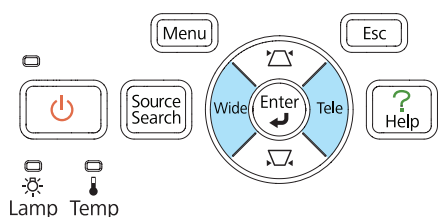


PowerLite X10+/W10+: Para reduzir ou aumentar a imagem, gire o anel de zoom.

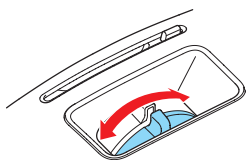

- 5 Se a imagem se parece com ou com , o projetor foi colocado em ângulo, deslocado do centro da tela. Coloque-o diretamente em frente ao centro da tela, de forma reta.
- 6 Se a imagem se parece com ou com , pressione ou no projetor para corrigir.

Uso do controle remoto

Coloque as duas pilhas AA como mostrado abaixo:

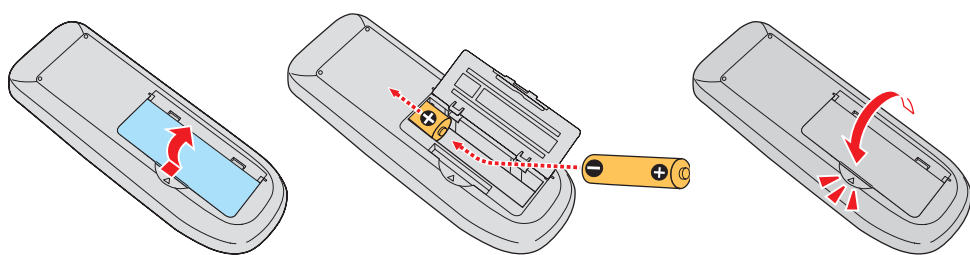

Para mais informações sobre utilização do controle remoto, consulte o *Manual do usuário*, incluído no CD do projetor para mais informação.

Resolução de problemas

Se vir uma tela em branco...

Se vir uma tela em branco ou a mensagem **Sem Sinal** após ligar o computador, verifique o seguinte:

- Certifique-se de que a luz de energia no projetor está verde e não piscando, e de que a tampa deslizante **A/V Mute** está aberta.
- Pressione o botão **Source Search** no projetor ou controle remoto para selecionar o computador como fonte de imagem.
- Se estiver usando um notebook com Windows, pressione a tecla de função no teclado que permite a exibição em um monitor externo. Ela pode se chamar **CRT/LCD** ou ter um ícone como . Talvez seja necessário segurar a tecla **Fn** ao pressioná-la (como **Fn + F7**).
- Em um Macintosh, selecione a configuração **Espelhar Monitores** no utilitário **Monitores** nas Preferências do Sistema.

Onde obter ajuda

Manual

Para mais informações a respeito do uso do projetor, instale o *Manual do usuário* incluído no CD do projetor.

Suporte On-line

Visite o site www.suporte-epson.com.br para soluções para problemas comuns. É possível baixar utilitários e documentação, ver conselhos sobre resolução de problemas e perguntas frequentes, ou enviar um e-mail para a Epson com suas dúvidas.

Telefone do serviço de suporte

Também é possível falar com um representante do suporte, ligando para o número a seguir. Tarifas de longa distância ou outras tarifas podem incidir sobre as chamadas.

Telefone: (55 11) 3956-6868

Compra de acessórios e suprimentos

Você pode comprar telas e outros acessórios de um revendedor autorizado da Epson. Para achar o revendedor mais próximo, entre em contato com o escritório da Epson mais próximo, como descrito aqui.

EPSON
EXCEED YOUR VISION



Epson é uma marca registrada e Epson Exceed Your Vision é uma logomarca registrada da Seiko Epson Corporation. PowerLite é uma marca registrada da Epson America, Inc.

Aviso geral: Outros nomes de produtos são usados aqui somente para fins de identificação e podem ser marcas comerciais de seus respectivos donos. A Epson nega todo e qualquer direito sobre essas marcas.

Esta informação está sujeita a mudanças sem aviso.

© 2010 Epson America, Inc. 5/10
País de impressão: XXXXXX

CPD-28037

Quick Setup

Before using the projector, make sure you read the safety instructions in the *User's Guide* on your projector CD.


Connect the projector

Choose from the following connections:

Computer USB Port

Connect a computer using the USB cable that came with your projector.

Connect the square end of the USB cable to the projector's  **TypeB** (square) USB port. Connect the flat end of the cable to any USB port on your computer. You can also connect an audio cable.

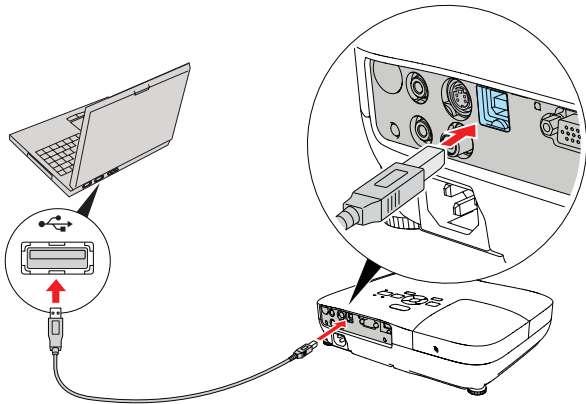

Windows®: After turning on the projector, follow the on-screen instructions to install the Epson USB Display software (EMP_UDSE.EXE; only on first connection).


NOTE: If the software screen does not display automatically, open **My Computer** or **Computer**, then double-click **EPSON_PJ_UD**.

Macintosh®: After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection).

Computer Monitor Port

Connect a computer using the VGA cable that came with the projector.

Connect one end to the projector's **Computer (Component Video)** port, and the other end to your computer's  monitor port. If you are using a notebook, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.

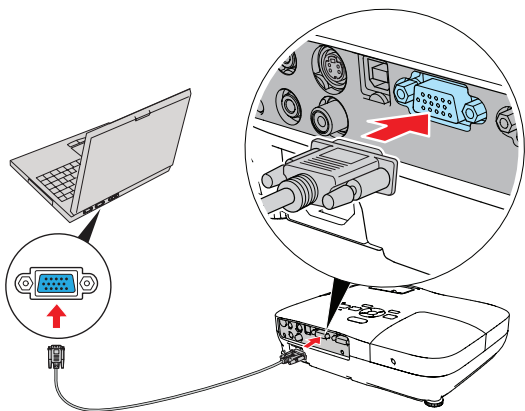


PowerLite S10+: You can also connect an external monitor to the **Monitor Out** port. See the *User's Guide* on your projector CD.

Camera or USB Device (PowerLite X10+/W10+)

You can use the projector's Slideshow feature to project JPEG images. See the *User's Guide* on your projector CD.


Video Device (PowerLite S10+)

Connect up to 3 video devices and use the remote control to switch between them.

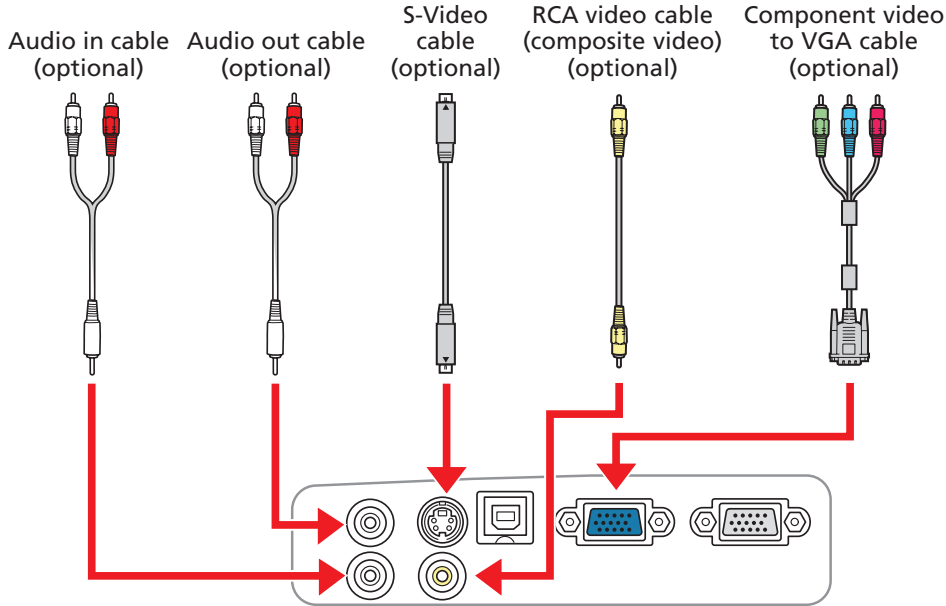


Video Device (PowerLite X10+/W10+)

Connect up to 4 video devices and use the remote control to switch between them.

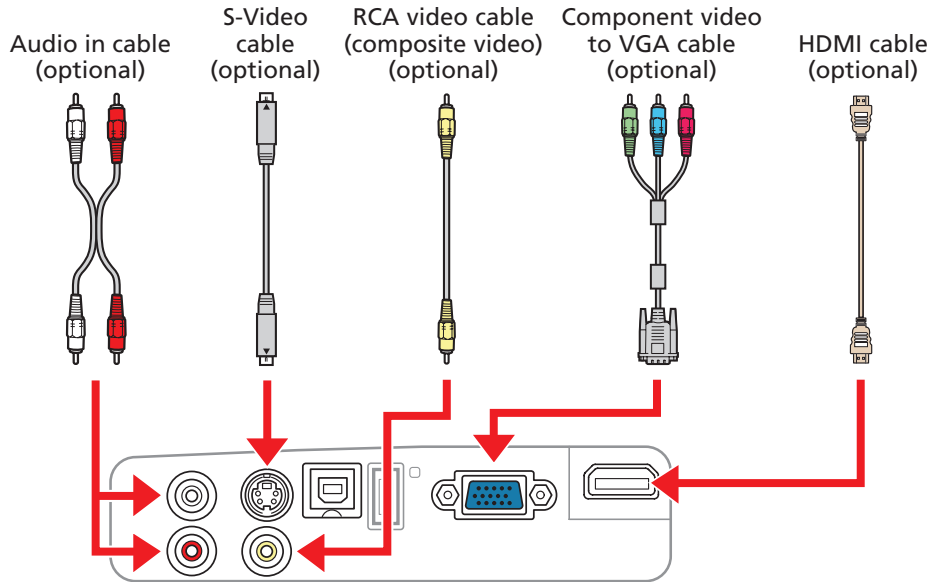


Turn on your equipment


- 1 Turn on your computer or video source.
- 2 Plug in the projector.

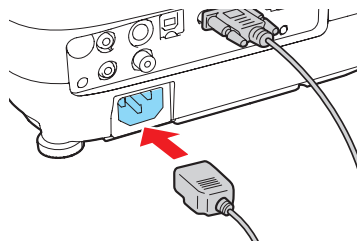

- 3 Open the **A/V Mute** slide all the way.

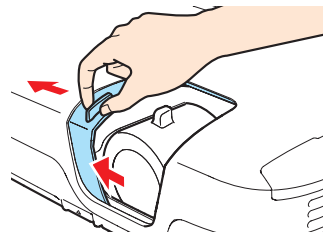

- 4 Press the  power button on the projector or remote control.

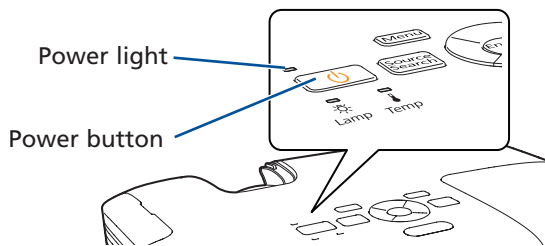


The power light flashes green, then stays on.

NOTE: To shut down the projector, press the  power button twice, then unplug it. You don't have to wait for the projector to cool down.


- 5 The default language of the menu system is **English**. To change the language, press the **Menu** button on the projector or the remote control. Select **Extended** and press **Enter**, then select **Language** and press **Enter**. Choose your language and press **Enter**. Press **Esc** or **Menu** to exit.

Adjust the image


- 1** If you don't see an image, press the **Source Search** button on the projector or remote control to select the image source.
- NOTE:** If you still see a blank screen or have other display problems, see the troubleshooting tips on the right.
- 2** To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.

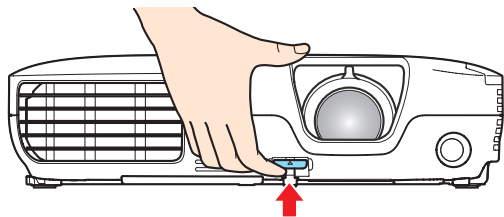


- 3** Turn the focus ring to sharpen the image.

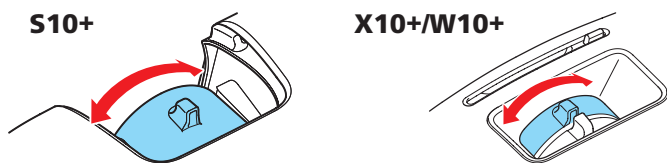

- 4 PowerLite S10+:** To reduce or enlarge the image, press the **Tele** (reduce) or **Wide** (enlarge) button on the projector. You can also use the **Zoom** option in the projector's Settings menu. See the *User's Guide* on your projector CD.

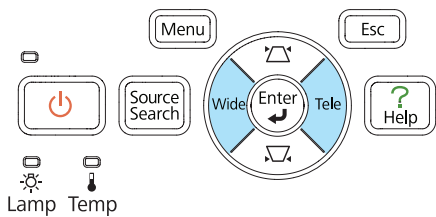



PowerLite X10+/W10+: To reduce or enlarge the image, turn the zoom ring.

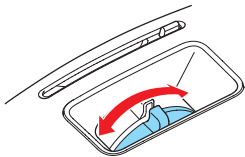

- 5** If your image looks like  or , you've placed the projector off to one side of the screen at an angle. Place it directly in front of the center of the screen, facing the screen squarely.
- 6** If your image looks like  or , press the  or  buttons on the projector to correct it.

Using the remote control

Make sure the batteries are installed as shown (two included AA batteries).

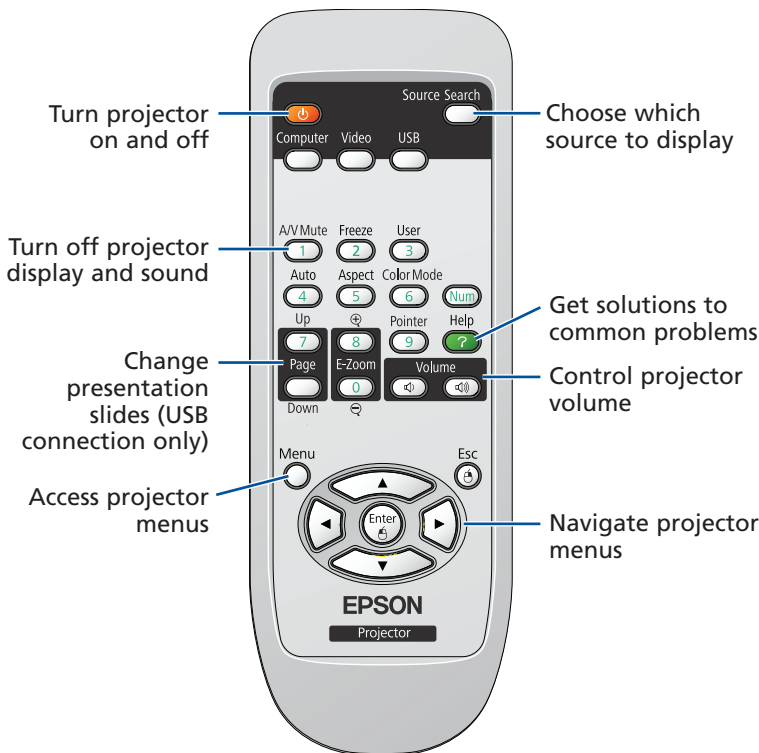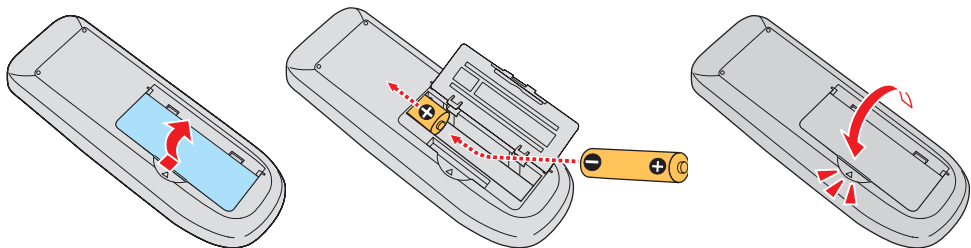

For more information on using the remote control, see your *User's Guide* on your projector CD.

Troubleshooting

If you see a blank screen...

If you see a blank screen or the **No signal** message after turning on your computer, check the following:

- Make sure the power light on the projector is green and not flashing, and the **A/V Mute** slide is open.
- Press the **Source Search** button on the projector or the remote control to select the computer as the image source.
- If you're using a Windows notebook, press the function key on your keyboard that lets you display on an external monitor. It may be labelled **CRT/LCD** or have an icon such as . You may have to hold down the **Fn** key while pressing it (such as **Fn + F7**).
- On a Macintosh, select the **Mirror Displays** setting in the System Preferences **Displays** utility.

Where to get help

Manual

For more information about using the projector, install the *User's Guide* from your projector CD.

Internet Support

Visit www.latin.epson.com for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson (site available only in Spanish and Portuguese).

Telephone Support Services

You may speak to a support service representative by dialing one of the following numbers. (Toll or long distance charges may apply.)

Country	Telephone Number	Country	Telephone Number
Argentina	(54 11) 5167-0300	Mexico	
Brazil	(55 11) 3956-6868	Mexico City	(52 55) 1323-2052
Chile	(56 2) 230-9500	Other cities	01-800-087-1080
Colombia	(57 1) 523-5000	Peru	(51 1) 418-0210
Costa Rica	(50 6) 2210-9555	Venezuela	(58 212) 240-1111
	800-377-6627		

If your country does not appear in the list, contact the Epson sales office of the nearest country.

Purchase Supplies and Accessories

You can purchase screens and other accessories from an Epson authorized reseller. To find the nearest reseller, call your nearest Epson sales office as described above.

EPSON
EXCEED YOUR VISION



Epson is a registered trademark and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation. PowerLite is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2010 Epson America, Inc. 5/10
Printed in XXXXXX